


MEDIA LITE DESKING ASSEMBLY INSTRUCTIONS

800 & 615 LEG FRAMES
DIFFER SLIGHTLY IN SHAPE.
CONSTRUCTION METHOD
FOR BOTH ARE THE SAME.
800 DEEP LEG FRAMES ARE
SHOWN IN INSTRUCTIONS.

800 DEEP

615 DEEP

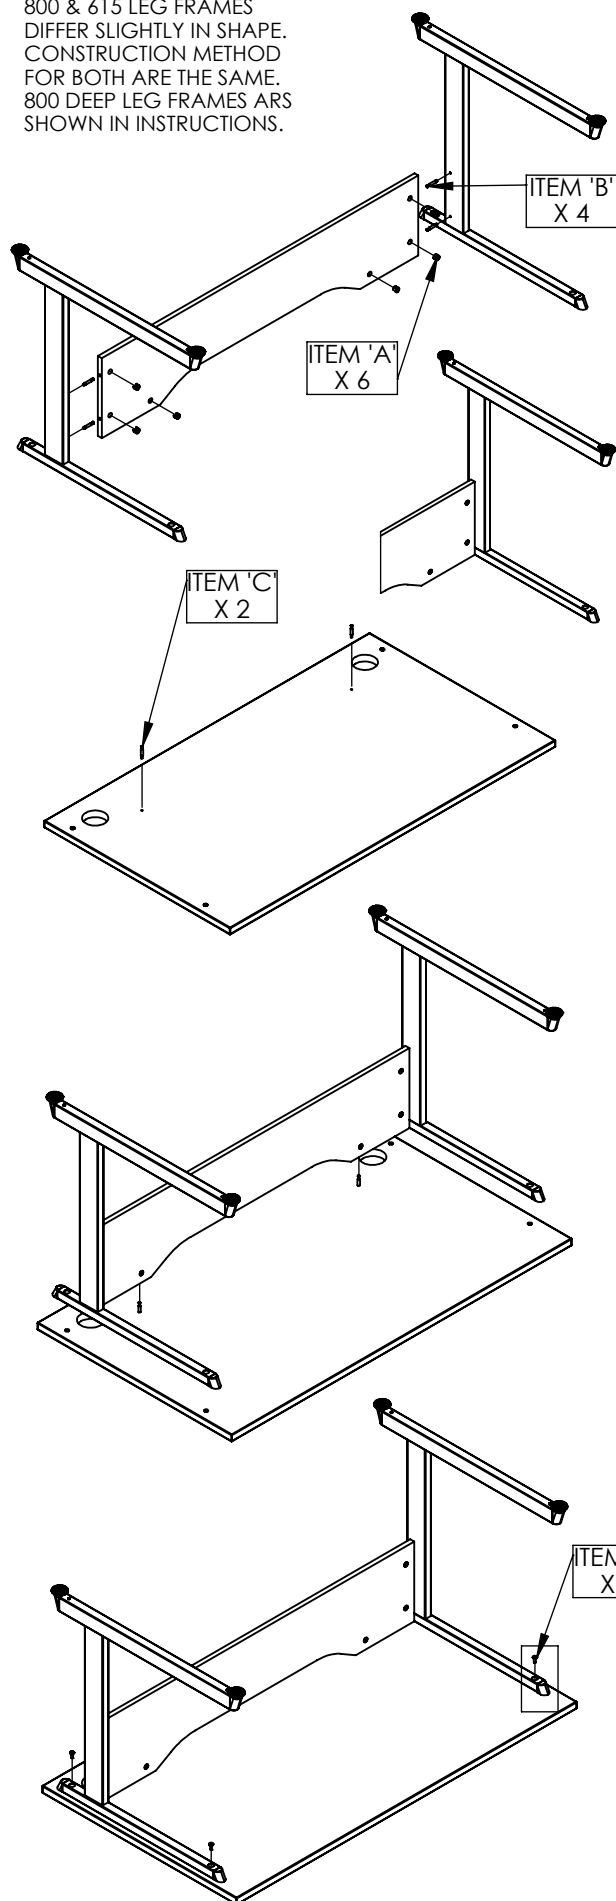

STEP 1.
INSERT CAM HOUSINGS ITEM 'A' INTO
MODESTY PANEL. SCREW IN CONNECTING
BOLTS M6 THREAD ITEM 'B' INTO LEG FRAMES.
ENSURE ARROW ON CAM HOUSING ARE AS
SHOWN IN DIAGRAM 'X' AND 'Y'.

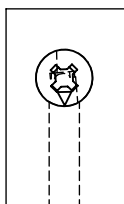


DIAGRAM X

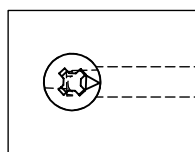


DIAGRAM Y

STEP 2.
ATTACH LEG FRAMES TO MODESTY PANEL
& TIGHTEN CAM HOUSINGS AS SHOWN
IN DIAGRAM 'Z'.

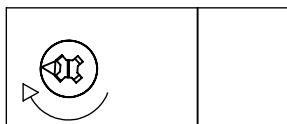


DIAGRAM Z

STEP 3.
SCREW IN CONNECTING BOLTS EURO
THREAD ITEM 'C' INTO DESK TOP.

STEP 4
OFFER UP MODESTY PANEL TO DESK TOP &
TIGHTEN CAM HOUSINGS AS SHOWN IN
DIAGRAM 'ZZ'.


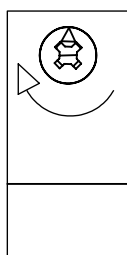


DIAGRAM ZZ

STEP 5
SCREW LEG FRAMES TO DESK WITH
M6 X 16mm SCREWS ITEM 'D'.



CAM HOUSING
X 6. ITEM 'A'.

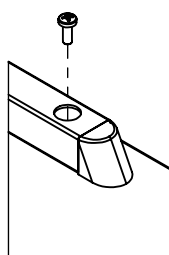

CONNECTING BOLT
M6 THREAD X 4.
ITEM 'B'



CONNECTING BOLT
EURO THREAD X 2.
ITEM 'C'



M6 X 16MM
MACHINE SCREW
X 4. ITEM 'D'



CABLE EXIT POD
X 1 OR X 2
DEPENDING ON
SIZE OF DESK.



TOOLS REQUIRED TO
ASSEMBLE DESK -
POZI HEAD SCREWDRIVER
NO. 2 POINT

STEP 6
INSERT CABLE EXIT
PODS IN DESK TOP.

