


EYE RECTANGULAR DESKING ASSEMBLY INSTRUCTIONS

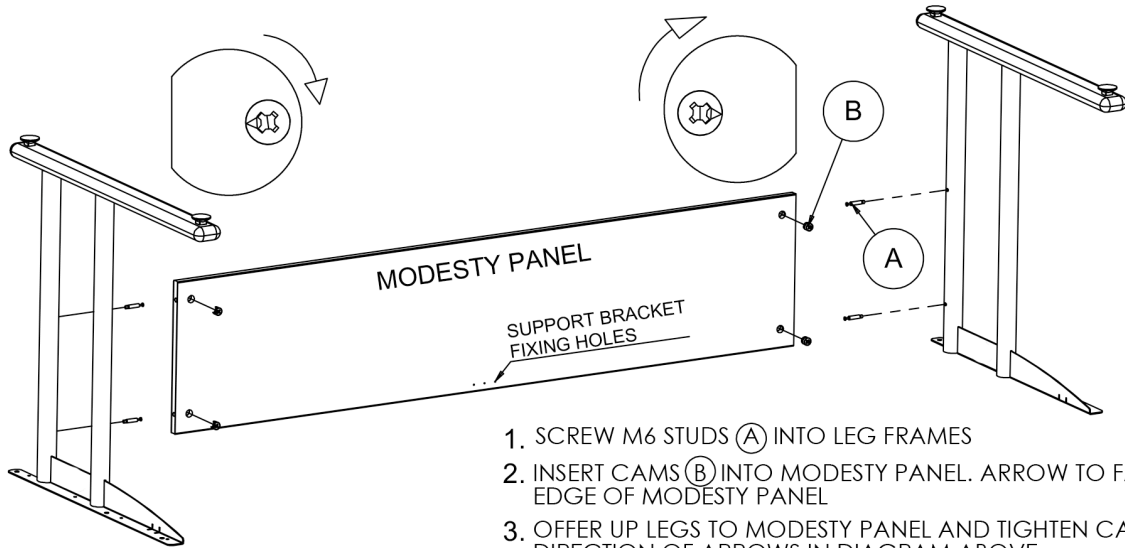

4. FASTEN FRAME TO THE TOP THROUGH LEG SIDE RAILS WITH 4 M6x 12mm P0Z1 MACHINE SCREWS (C)

5. FASTEN SUPPORT BRACKET (D) TO THE TOP AND MODESTY PANEL WITH NO.8 X 1/2" WOODSCREWS (E) 4 OFF

6. INSERT CABLE OUTLET PODS INTO THE TOP (F)

