


Scape Lite Assembly Instructions

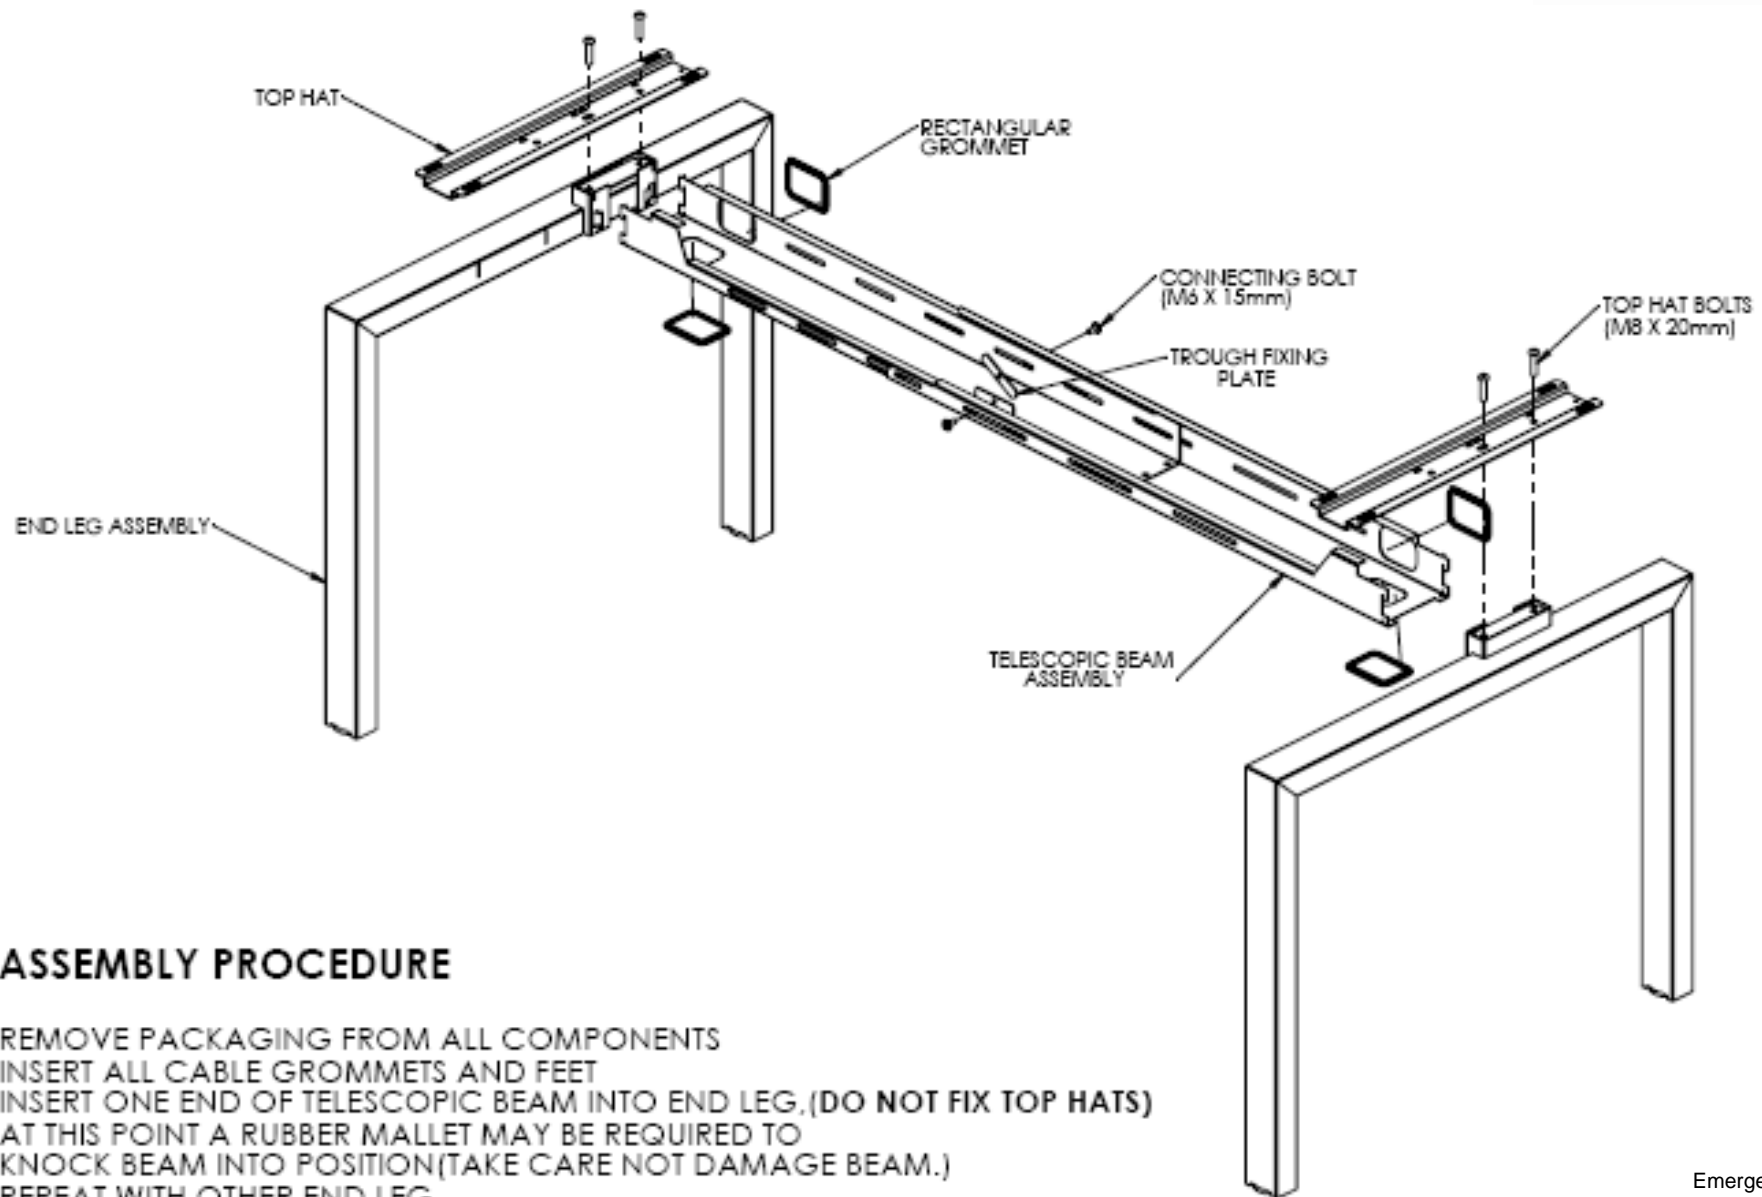

ASSEMBLY PROCEDURE

- REMOVE PACKAGING FROM ALL COMPONENTS
- INSERT ALL CABLE GROMMETS AND FEET
- INSERT ONE END OF TELESCOPIC BEAM INTO END LEG, (DO NOT FIX TOP HATS)
- AT THIS POINT A RUBBER Mallet MAY BE REQUIRED TO KNOCK BEAM INTO POSITION (TAKE CARE NOT DAMAGE BEAM.)
- REPEAT WITH OTHER END LEG
- SECURE TOP HATS WITH BOLTS PROVIDED AND TIGHTEN
- SLIDE BEAMS TO APPROX DISTANCE REQUIRED TO SUIT TOP LENGTH
- HOLD TROUGH FIXING PLATES ON INSIDE OF TROUGH AND SCREW IN CONNECTING BOLTS THROUGH SLOTS PROVIDED AND TIGHTEN