


Electric Height Adjustable Desk 2-Leg

User Guide

Say goodbye to a stationary lifestyle!

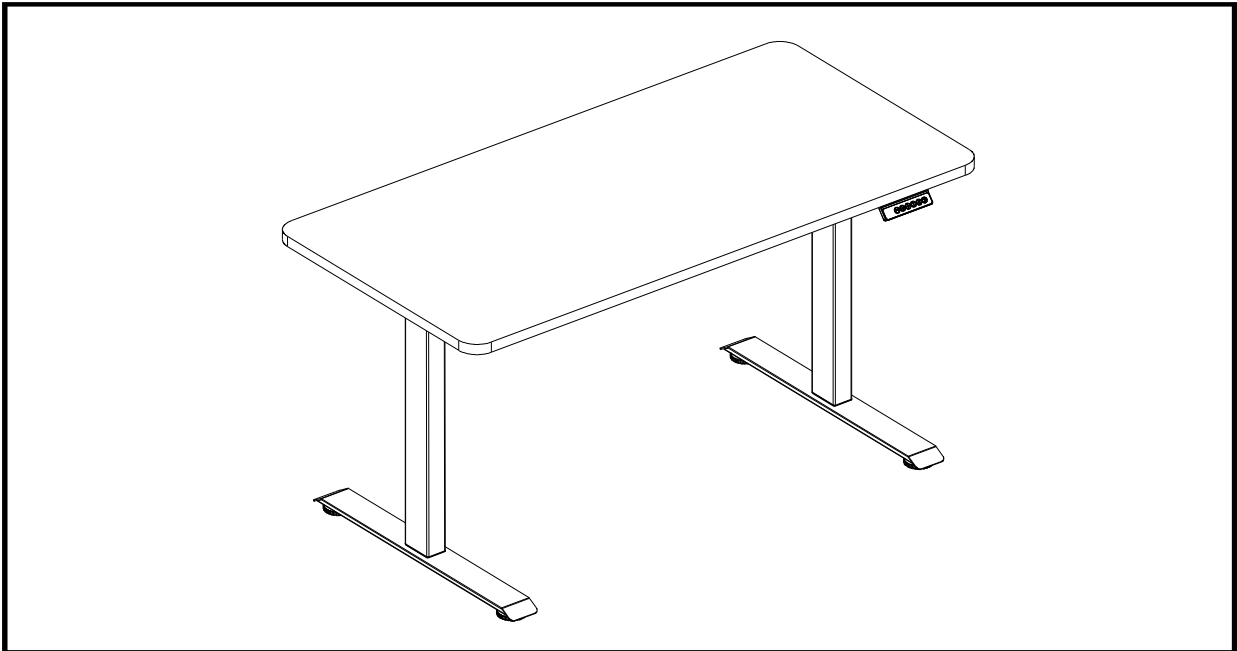

CAUTION

MAKE SURE NO OBSTACLES ARE IN THE DESK'S PATH AND ALL CORDS ARE OF APPROPRIATE LENGTH FOR DESK TRAVEL. FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY, AND OPERATION INSTRUCTIONS AND WARNINGS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS PROPERTY DAMAGE OR BODILY INJURY.

IMPORTANT

Any user or installer of desk base must study this manual carefully.

If this desk is sold, please provide the manual to the buyer.

⚠ CAUTION:

SAFETY AND WARNINGS

- Inappropriate use of this product may cause property or bodily injury. Make sure that children, pets, etc. stay away from the product when the desk is in operation.
- Check the surroundings on all sides before using the desk. Make sure the desk does not touch the wall.
- Please unplug the power supply during lightning and when the product is not in use for a long time.
- Make sure NO obstacles are in the desk's path and no obstacles higher than 500 mm under the table. Body parts and property can be crushed if trapped between an immobile obstacle and the desk's range of motion.
- Keep the work environment temperature at 0-40 °C. And keep goods away from corrosive gases, liquids, and dusty objects.
- Ensure the length of power cords is accounted for when operating the desk. Monitors, computers, speakers, and anything with a cord that is not long enough for the desk's range of motion could be pulled down or have its wires broken. Items pulled off the desk may cause other items to fall.
- It is strictly forbidden to disassemble the product without permission, in order to prevent the product from malfunctioning and electronic products from causing harm to the human body.
- Please provide this operation to any users, installers, or support personnel operating the product. Read relevant operating instructions before using. The company does not take any responsibility for product damage and human body injury caused by the abnormal operations.

USAGE

This desk height is adjustable so that it can be positioned at the most ergonomically suitable height. These desks are designed only for the purposes included in this manual. They should not be used in environments with high humidity or dampness. Any other use is at the user's risk.

Do not move around, crawl or lie under the desk frame. Do not sit or stand on the desk frame.

Children should never use the desk unless they are supervised by adults.

Liability: Under no circumstances does the manufacturer accept warranty claims or liability claims for damages caused by improper use handling of the desk frame other than that which is described in this operation manual.

SETUP AND INSTALLATION

Once the desk has been assembled, adjust the feet so that the desk is level and does not shift its position. After this, connect the desk to the 240v outlet and the desk is ready for use.

Check that no cables can get jammed.

Choose a placement for the desk that's a safe distance from window frames, radiators, furniture, etc. So that people do not get stuck or trapped by the desk.

Do not place any objects that are taller than 50cm(20") underneath the desk. After it has been assembled, when moving the desk, DO NOT lift the desk by the desktop. Lifting this way can stress the fasteners connecting the desk base to the desktop. Lower the desk completely and lift the desk by grabbing the top of the desk base or by removing the desktop first.

SAFETY AND WARNINGS

This desk height is adjustable so that it can be positioned at the most ergonomically suitable height. These desks are designed only for the purposes included in this manual. They should not be used in environments with high humidity or dampness. Any other use is at the user's risk.

Do not move around, crawl or lie under the desk frame. Do not sit or stand on the desk frame.

Children should never use the desk unless they are supervised by adults.


Liability: Under no circumstances does the manufacturer accept warranty claims or liability claims for damages caused by improper use handling of the desk frame other than that which is described in this operation manual.

1. PARTS LIST

Tools Required



4mm
Wrench(included)

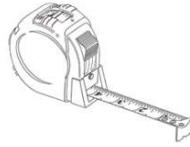

Tape Measure




Philips Head Screwdriver



Power Drill


Components

①




Lifting Column *2

②

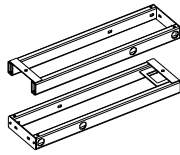


Crossbar End *2

③




Crossbar Center Rails *2

④




Side Bracket *2

⑤




Foot *2

⑥




Leveling Studs *4

⑦




Adapter *1

⑧



Handset *1

⑨



Wires *3

⑩



Hanger *1


Hardware

A



Qty 8
M6X12
Screws

B



Qty 8
M6X16
Screws

C



Qty 4
M6X8
Screws

D



Qty 10
M5X18
Screws

E



Qty 2
M3.5X14
Screws

F



Qty 8
M8X6
Screws

G



Qty 1
Glue
Pad

H




Qty 5
Cable
Clips

2. ASSEMBLY INSTRUCTIONS



1 Pull out the frame

- a** Lay out all components and hardware to ensure that you have all the parts.
- b** Lay the Crossbar End 1 and 2 out flat on the floor, slide the frame out evenly from both sides.
- c** Slide crossbar center rails out of Crossbar ends.

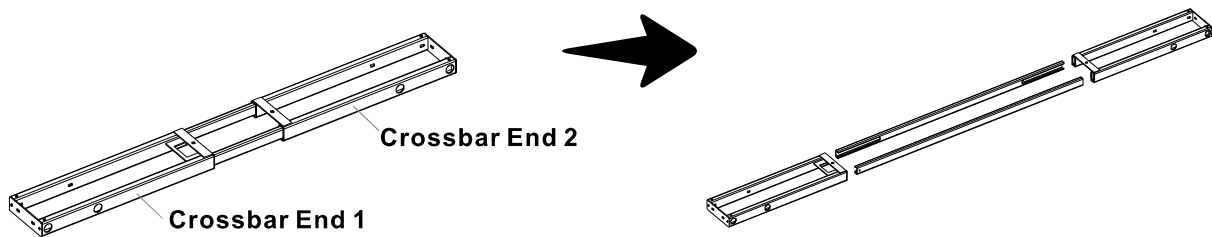

2 Attach legs to Frame



- a** Align the crossbar end to the lifting column, Insert the M6X12 mm screws(A), and tighten it.
- b** Repeat for the other side.

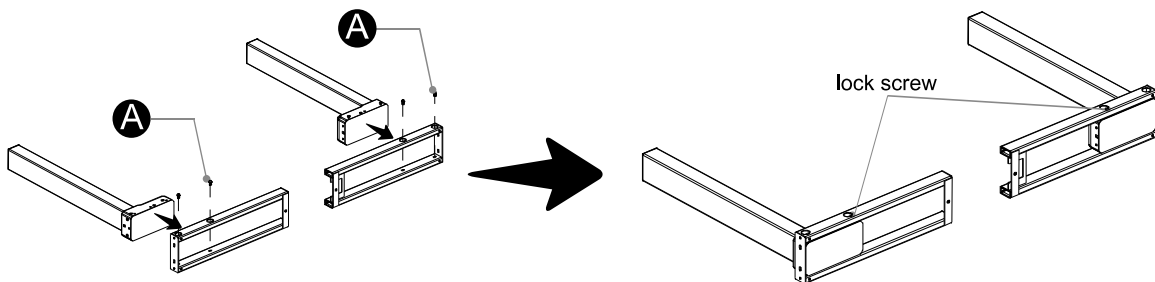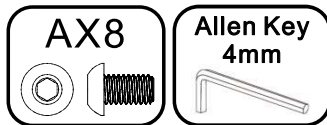

⚠ Avoid over-tightening the screws to damage the product.

3 Attach Side Bracket



- a** Line up the two holes on the side bracket with the Crossbar End .
Insert two M6X 8 mm screws(C)and tighten it.
- b** Repeat for the other side.

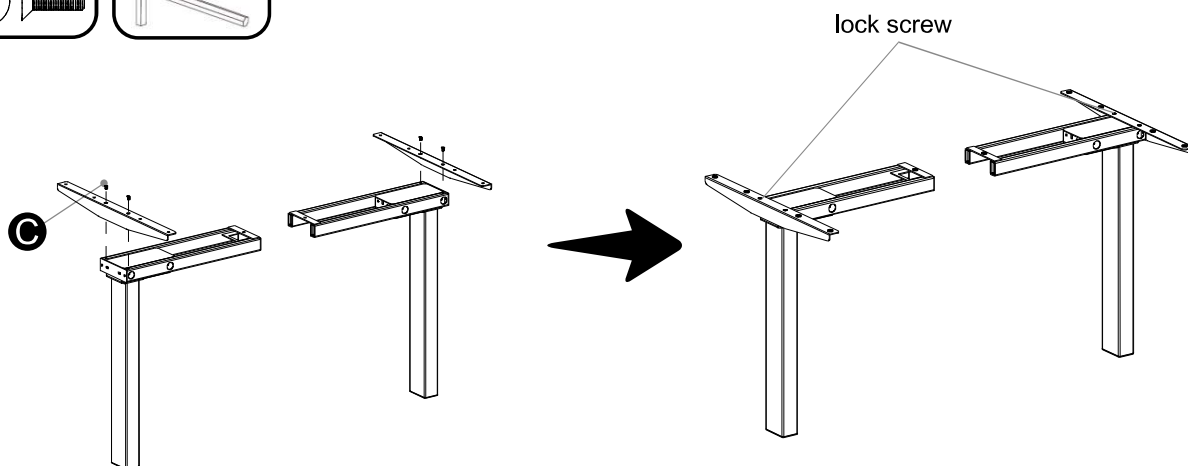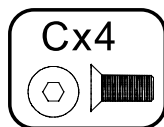

⚠ Avoid over-tightening the screws to damage the product.

4 Attach Foot


- a** Attach leveling studs to the foot.
- b** Align the foot with the lift column, and insert four M6×16 mm(B) into the holes under the feet, tighten it.
- c** Repeat for the other side.

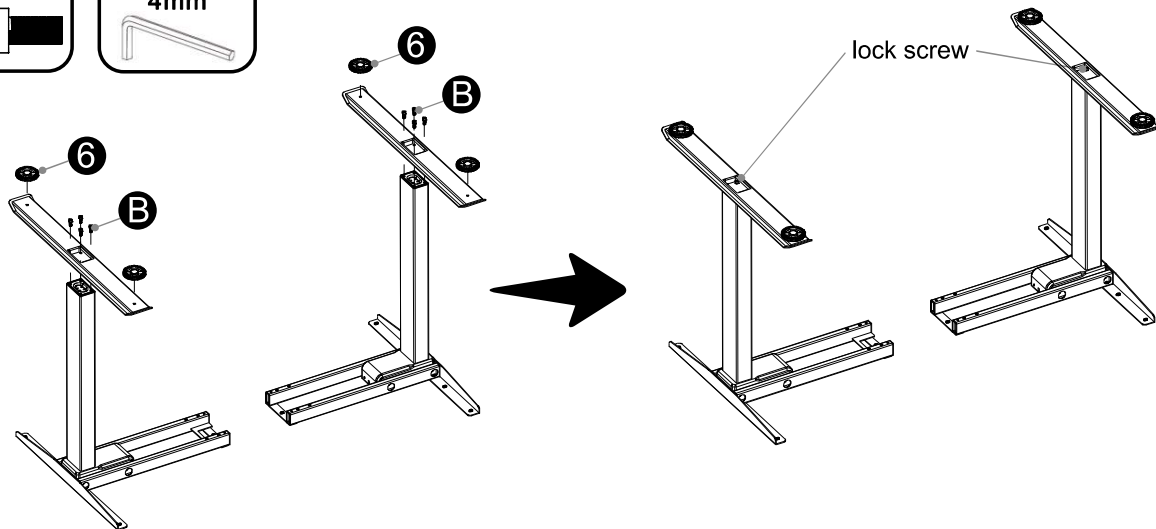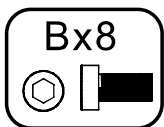

⚠ Avoid over-tightening the screws to damage the product.



5 Merge the frame

- a** Slide Crossbar Center Rails back into Crossbar Ends. Ensure the slots of the Crossbar Center Rails are facing inward.
- b** First, stick Glue Pad(G) onto adapter(7), Insert hanger(10) into the crossbar and put the adapter (7) in the hanger(10).

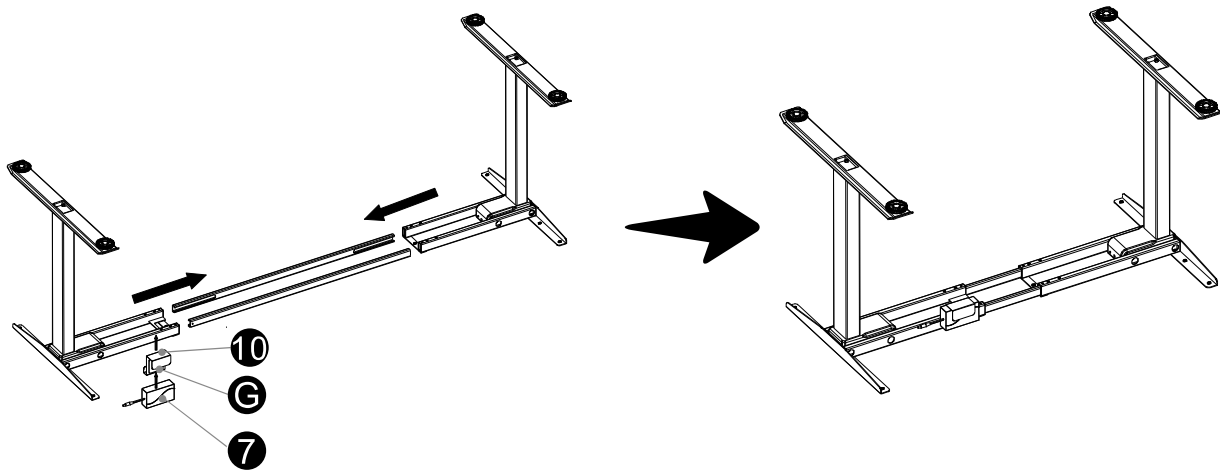

6 Attach Frame Set to tabletop



- a** Place the bottom of the tabletop on the underside of the installed frame, stretch the frame. It is recommended that the frame side boards at both ends be 50mm away from the edge of the table board, and fasten with M5X18 mm screws(D) .
- b** Use M8X6 mm screws(F) to fasten the crossbar ends and crossbar center rails.

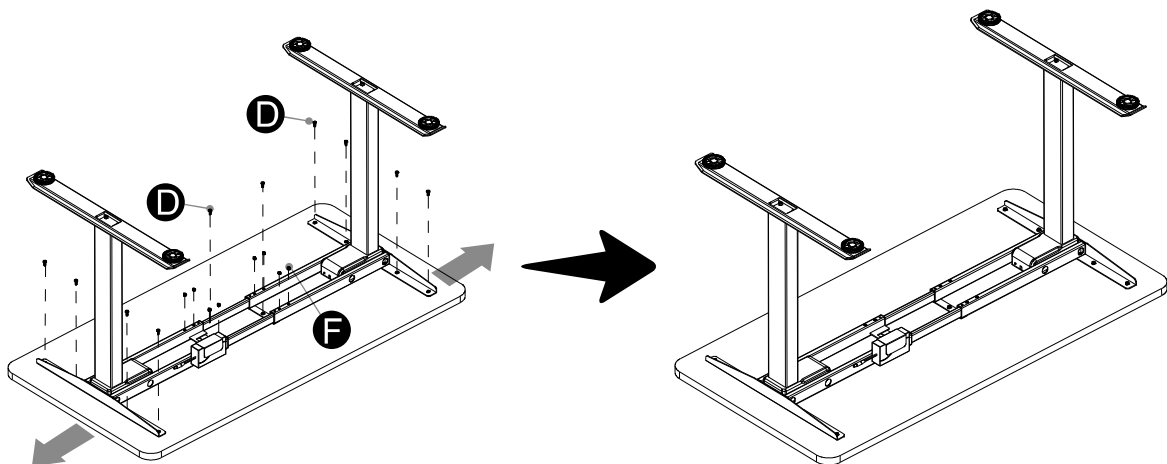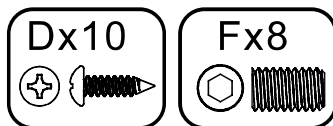

The length of the frame can be adjusted by lifting the two side brackets. The adjustable range is 1010~1750 mm, which can be used for tables of different widths.
Avoid over-tightening the screws to damage the product.

7 Attach Adapter & Handset


- a** Insert the Adapter(7) into the hanger(10).
- b** Attach the Handset(8) to the tabletop plate with M3. 5X14mm(E) screws.

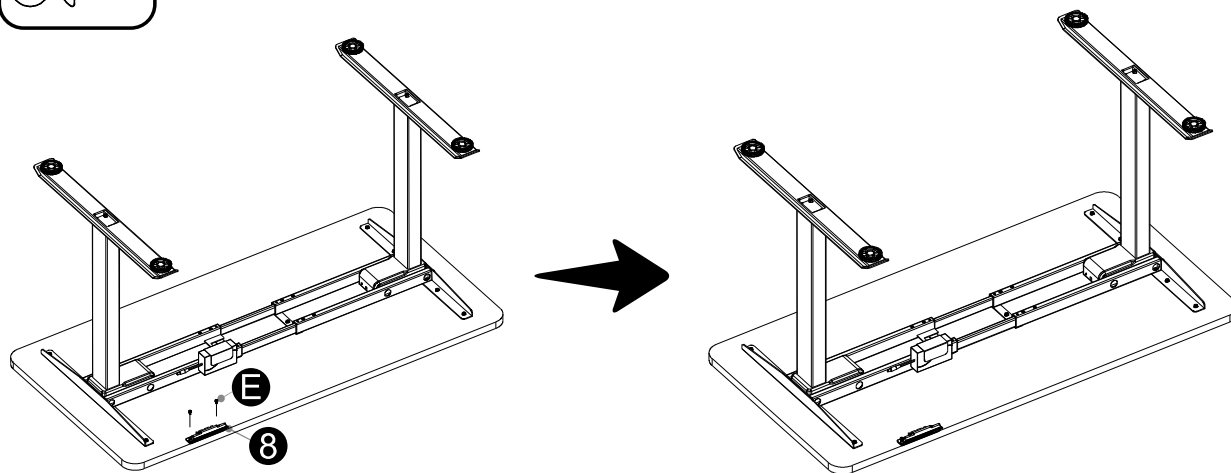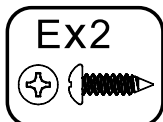

⚠ Avoid over-tightening the screws to damage the product.


8 Attach Connect Cables

- a** Connect the line pulled from lifting column 1 to Handset(8) interface 1. Connect the line pulled from the other lifting column to Handset(8) interface 2.
- b** Connect the outgoing lines from the Handset (8) to the Adapter(7).
- c** Connect power cable (9) to Adapter(7) AC port.

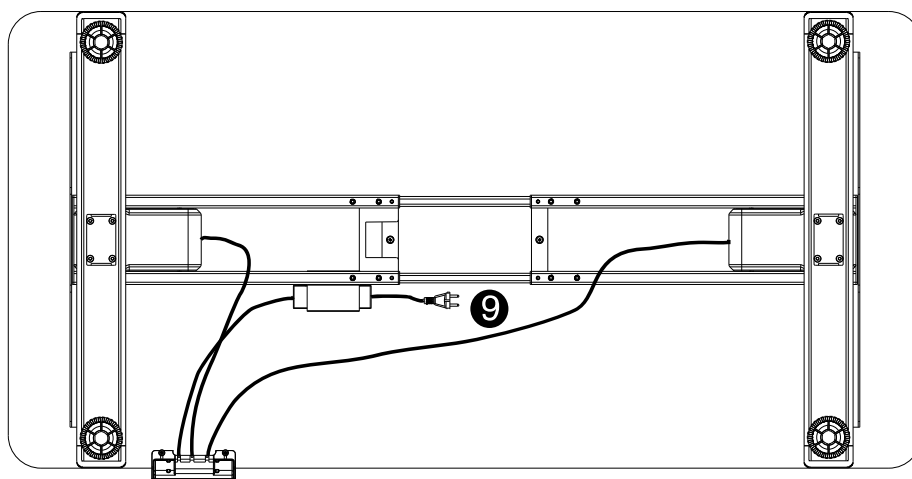

9 Put desk Upright and Connect Power Cord to the Power Supply

- a** With the desk at its lowest height, turn the assembled desk right-side up with the help of at least two people.
- b** Plug the Power Cord(9) into a 240v outlet.

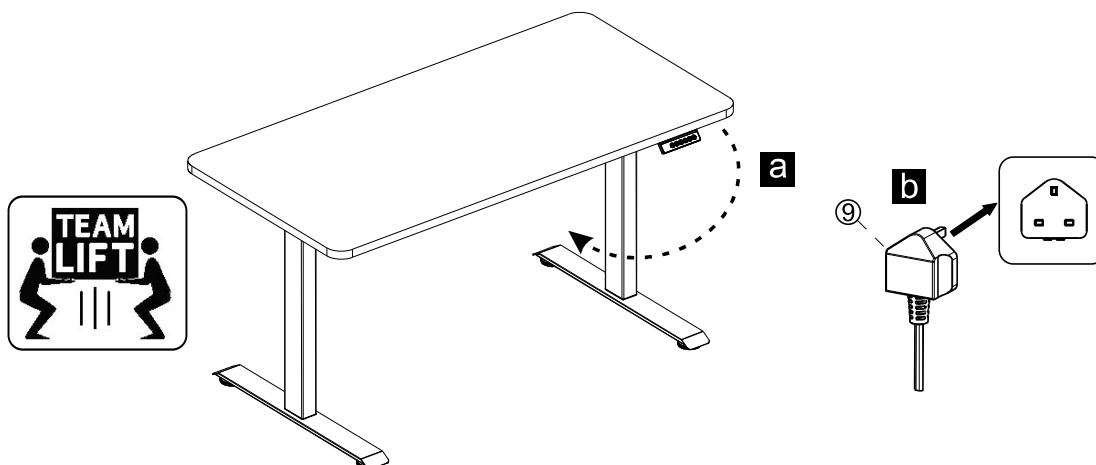


! NOTE: Grab the desk Frame (not the desktop and turn the desk right-side up.
Use at least two people.
CAUTION, the desk is very heavy!

10 Adjust Leveling Studs

If necessary, adjust the leveling studs to level the desk.
Unscrew to increase height, screw in to decrease height.

11 IMPORTANT! You must carry out the RESET prior to first use

- a** Press "∨" button until desk reaches the lowset position.
- b** Press "∨" 5 seconds until there is a beep sound heard, the desk reset successful.
Your desk is ready to use.

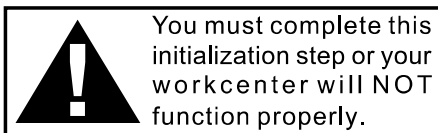

You must complete this initialization step or your workcenter will NOT function properly.

Hold down the down arrow until workcenter moves slightly upwards!